

RYOBI®

OWNER'S OPERATING MANUAL ELECTRIC BLOWER / VAC MODEL RESV2200T



**DOUBLE
INSULATED**



N197

THANK YOU FOR BUYING A RYOBI BLOWER/VAC

Your new blower/vac has been engineered and manufactured to Ryobi's high standard for dependability, ease of operation and operator safety. Properly cared for, it will give you years of rugged, trouble free performance.



CAUTION: Carefully read through this entire owner's manual before using your blower/vac.

Pay close attention to the Rules for Safe Operation, Warnings and Cautions.

If you use your blower/vac properly and only for what it is intended, you will enjoy years of safe, reliable service.

Thank you again for buying Ryobi tools.

SAVE THIS MANUAL FOR FUTURE REFERENCE

RULES FOR SAFE OPERATION

The purpose of safety rules is to attract your attention to possible dangers. The safety symbols and the explanations with them, require your careful attention and understanding. The safety warnings do not by themselves eliminate any danger. The instruction or warnings they give are not substitutes for proper accident prevention measures.




SAFETY ALERT SYMBOL. Indicates caution or warning. May be used in conjunction with other symbols or pictures.



WARNING: Failure to obey a safety warning can result in serious injury to yourself or to others. Always follow the safety precautions to reduce the risk of fire, electric shock and personal injury.



WARNING: Do not attempt to operate this tool until you have read thoroughly and understood completely, safety rules, etc. contained in this manual. Failure to comply can result in accidents involving fire, electric shock or serious personal injury. Save owners manual and review frequently for continuing safe operation and instructing others who may use this tool.



The operation of any tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and a full face shield when needed. We recommend Wide Vision Safety Mask for use over eyeglasses or standard safety glasses with side shields.

- 1. KNOW YOUR POWER TOOL.** Read owners manual carefully. Learn its applications and limitations as well as the specific potential hazards related to this tool.
- 2. GUARD AGAINST ELECTRICAL SHOCK BY PREVENTING BODY CONTACT WITH GROUNDED SURFACES.** For example, pipes, radiators, ranges, refrigerator enclosures.
- 3. KEEP WORK AREA CLEAN.** Cluttered areas and benches invite accidents.
- 4. AVOID DANGEROUS ENVIRONMENT.** Don't use power tools in damp or wet locations or expose to rain. Keep work area well lit.
- 5. KEEP CHILDREN AND VISITORS AWAY.** Visitors should wear safety glasses and be kept a safe distance from work area. Do not let visitors contact tool or extension cord.
- 6. STORE IDLE TOOLS.** When not in use, tools should be stored in a dry and high or locked-up place, out of reach of children.
- 7. DON'T FORCE TOOL.** It will do the job better and safer at the rate at which it was designed.
- 8. USE RIGHT TOOL.** Don't force small tool or attachment to do the job of a heavy duty tool. Don't use tool for purpose not intended.

- 9. DRESS PROPERLY.** Do not wear loose clothing or jewellery. They can be caught in moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Also wear protective hair covering to contain long hair.
- 10. ALWAYS WEAR SAFETY GLASSES.** Everyday eyeglasses have only impact resistant lenses, they are not safety glasses.
- 11. PROTECT YOUR LUNGS.** Wear a dust mask if operation is dusty.
- 12. PROTECT YOUR HEARING.** Wear hearing protection during extended periods of operation.
- 13. DON'T OVERREACH.** Keep proper footing and balance at all times. Do not use tool on a ladder or unstable support. Secure tools when working at elevated levels.
- 14. MAINTAIN TOOLS WITH CARE.** Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories.
- 15. REMOVE ADJUSTING KEYS AND WRENCHES.** Form a habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
- 16. NEVER USE IN AN EXPLOSIVE ATMOSPHERE.** Normal sparking of the motor could ignite fumes.
- 17. KEEP HANDLES DRY, CLEAN AND FREE FROM OIL AND GREASE.** Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum based products, or any strong solvents to clean your tool.
- 18. STAY ALERT AND EXERCISE CONTROL.** Watch what you are doing and use common sense. Do not operate tool when you are tired. Do not rush operation of tool.
- 19. CHECK DAMAGED PARTS.** Before further use of the tool, a guard or any other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting and any other conditions that may affect its operation. A guard or any other part that is damaged should be properly repaired or replaced by an authorised service centre.
- 20. DO NOT USE TOOL IF SWITCH DOES NOT TURN IT ON AND OFF.** Have defective switches replaced by authorised service centre.
- 21. DO NOT OPERATE THIS TOOL WHILE UNDER THE INFLUENCE OF DRUGS, ALCOHOL OR ANY MEDICATION.**
- 22. THE APPLIANCE IS NOT INTENDED FOR USE BY YOUNG OR INFIRM PERSONS WITHOUT SUPERVISION. YOUNG CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.**

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Due to continued product refinement policy, product features and specifications can and will change without notice. Check current features and specifications with your retailer.

Please Read and Save these instructions

When using an electrical appliance, basic precautions should always be followed to assure maximum safety and optimum performance. Read the Owners Manual before assembling and operating this appliance. Failure to comply with instructions may result in fire, electrical shock or personal injury.

Warning

To reduce the risk of electric shock:

1. Use only with an extension cord intended for outdoor use, match wire gauge to the cord length. A two-wire cord without a ground connection may be used since the appliance is double insulated. Keep the extension cord away from heat, oil and sharp edges.
2. Do not abuse cord. Never carry appliance by cord or pull cord to disconnect from outlet. Grasp the plug, not the cord.
3. Keep cord clear of operator and obstacles at all times. Do not expose cord to heated surfaces, oil, water, or pull around sharp edges, corners, or close door on cord.
4. Avoid unintentional starting. Be sure the switch is in the "0"(off) position while connecting and disconnecting to a power supply. Do not carry plugged-in appliance with finger on switch.
5. Place switch in the "0" position and disconnect appliance from power supply when not in use and before servicing.
6. Do not operate the tool near people, especially children or pets. Turn it off if they get too close. Maintain a safe distance of at least 5m from other people when using the tool.
7. Only use the tool according to the instructions given in this manual. Use only spare parts and accessories recommended by the manufacturer.
8. Never use appliance if the cord or plug has been damaged, the motor or the unit itself is not working as it should, or it has been dropped, damaged, left outdoors or dropped into water.
9. This appliance is provided with double insulation.
10. Never operate the appliance in wet or damp conditions or around swimming pools, hot tubs, etc. Do not use to blow snow.
11. Do not handle the plug or the tool with wet hands and do not use the tool in the rain.
12. Inspect appliance for any damage to the housing, cord or plug, Keep all fasteners tight.
13. Do not use if the switch does not turn the appliance on and off properly.
14. Always inspect the area before starting the appliance to remove debris and hard or sharp objects that can be blown or cause damage during operation.
15. Do not overreach or use from unstable surfaces such as ladders, trees, steep slopes, rooftops, etc. Keep firm hold of handle and walk, never run. Keep firm footing and balance at all times.
16. Never blow debris in the direction of bystanders or solid objects. The force of the air can cause objects to be blown or ricochet, which can harm people. Never place objects inside blower tubes.
17. Never operate with any air openings blocked. Keep air openings free of dust, lint, hair and anything that may reduce airflow. Do not plug anything into openings or blowers tubes.
18. Never use the appliance for spreading chemicals, fertilizer, or any other substances that may contain toxic materials. Do not use appliance as a sprayer of flammable liquids.

19. Keep all the air intakes and the blower tube free of dust, lint, hair and other material that may cause a reduction in air flow.
20. Use extra care when using on stairs.
21. Do not switch on the tool in enclosed or poorly ventilated spaces or in the presence of inflammable and/or explosive substances such as liquids, gas and powders.)
22. Disconnect electrical supply before opening inlet cover or installing pick up tubes. Never operate unit without inlet cover secured or pick-up tubes in place.



Double Insulated



Use at distance of at least 5m from other people



Do not use in the rain



Conforms to relevant safety standards



 
 
 
 
 
 
Wear eye, ear and breathing protection



Read the instructions




Recycle unwanted materials instead of disposing of them as waste. All tools, hoses and packaging should be sorted, taken to the local recycling centre and disposed of in an environmentally safe way.

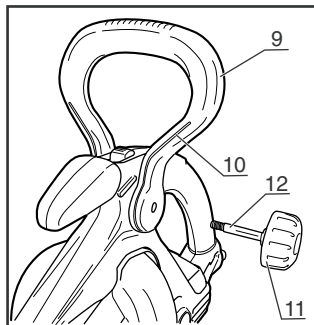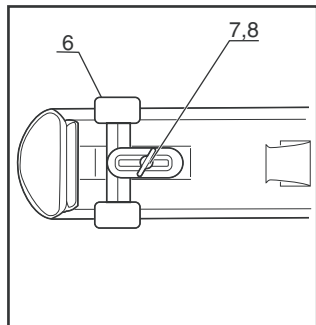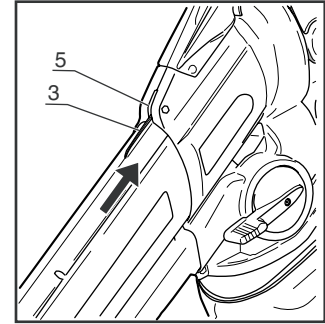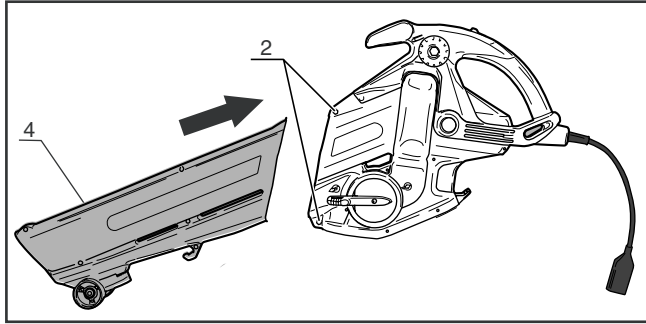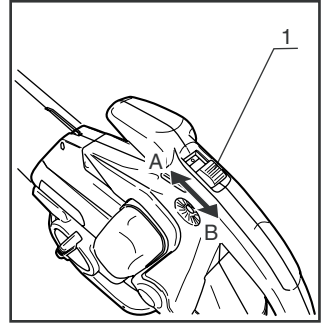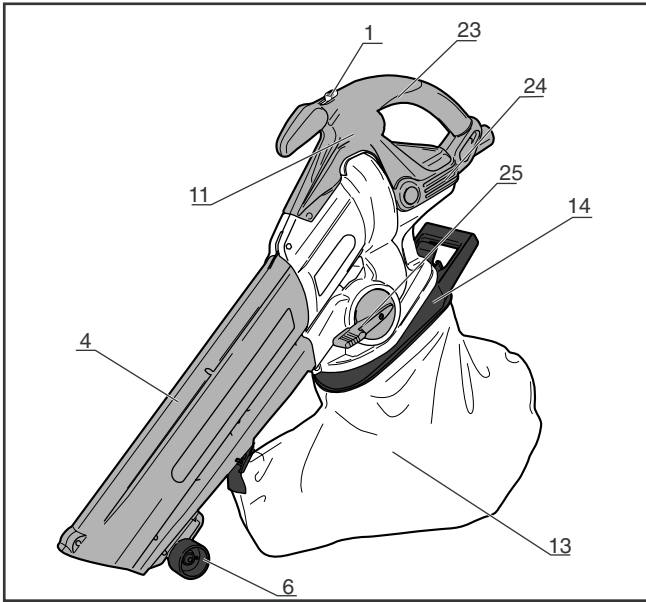


4

 
5

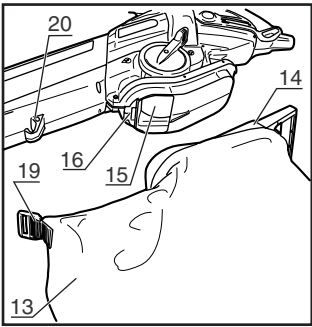


6

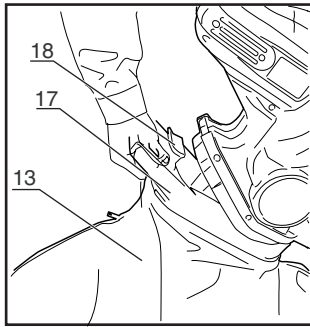 


7

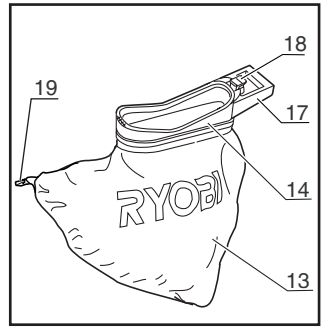 


8

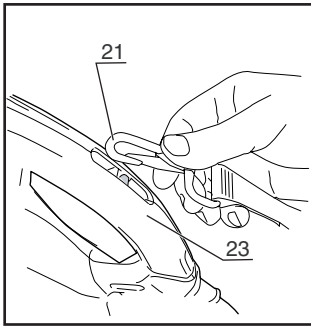 


9

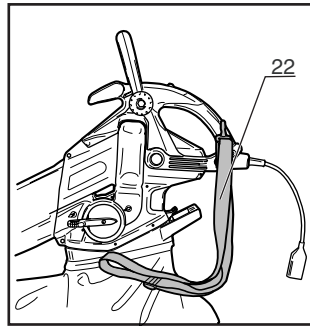 


10

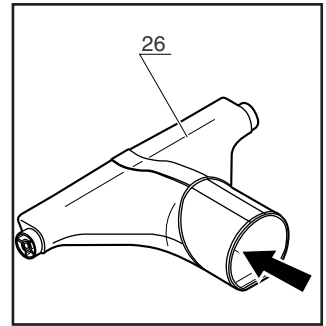 


11

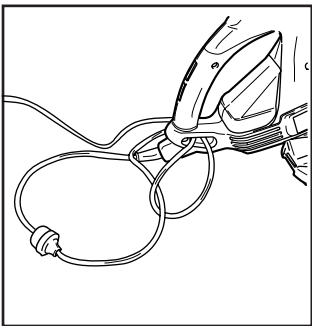 


12

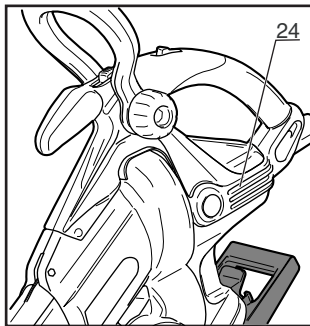 


13

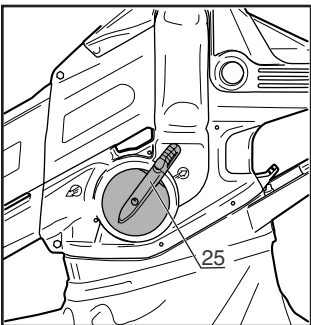 


14

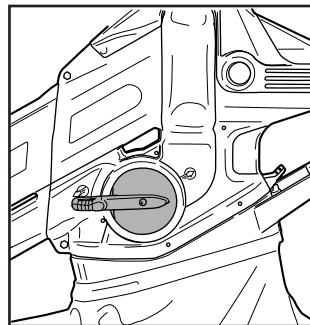 


15

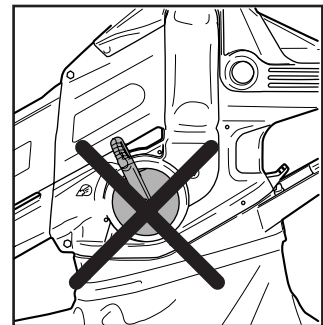 


16

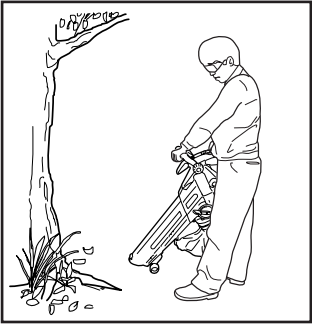 

17

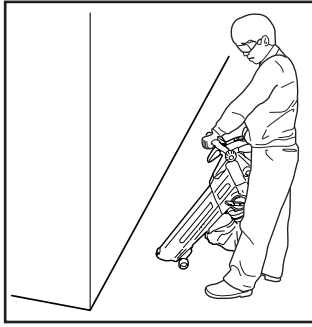 


18

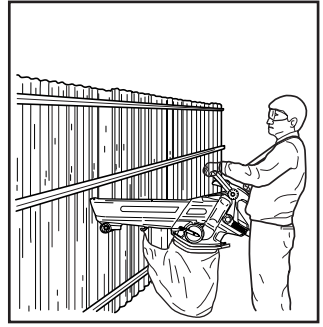 


19



 20

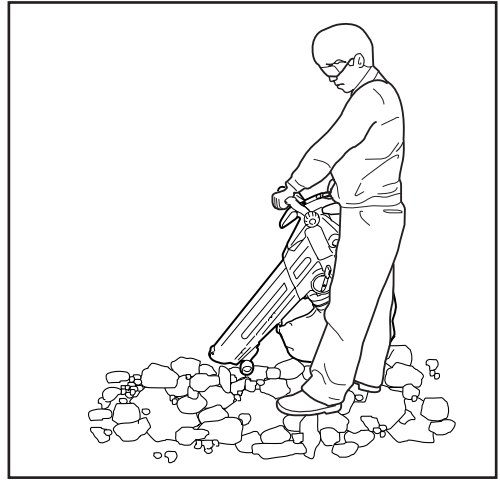

21

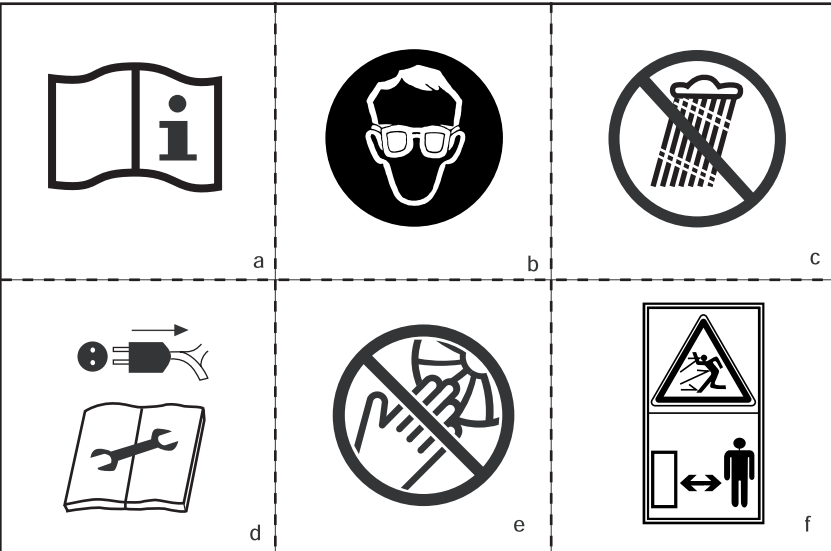 

THANK YOU FOR BUYING A RYOBI PRODUCT.

To ensure your safety and satisfaction, carefully read through this OWNER'S MANUAL before using the product.

Be familiar with the controls and the proper use of the appliance.

SAFETY INSTRUCTIONS**WARNING!**

When using the appliance, the basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following.

The operator or user is responsible for accidents or hazards occurring to other people or their property.

Read all these instructions before attempting to operate this product and save these instructions.

For safe operation:

1. Do not leave the appliance plugged in when not in use, or while being serviced. Unplug from the outlet when not in use and before servicing.
2. Do not use on wet surfaces. Do not expose to rain. Store indoors.
3. Never allow children to use the appliance.
4. Use only as described in this manual. Use only the manufacturer's recommended attachments.
5. This appliance is provided with double insulation. Use only the original equipment manufacturer's replacement parts.
6. Do not use with a damaged cord or plug. If the appliance is not working as it should or it has been dropped into water, return it to an authorized service center.
7. Do not pull or carry the appliance by the extension cord, do not use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces.
8. Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
9. Do not handle the plug or appliance with wet hands.
10. Do not put any object into openings.
Do not use with any opening blocked; keep free of dirt, debris and anything that may reduce the air flow.
11. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
12. Do not vacuum up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
13. Do not use in the vacuum mode without the dust bag in place.
14. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
15. Turn off all controls before unplugging.
16. Use extra care when cleaning on stairs.
17. Pull the plug out immediately if the mains or extension lead is damaged or severed.
18. Use only the machine during the day or with a correct artificial light.
19. Don't use the unit if domestic animals are near from working area.

ELECTRICAL SAFETY WARNINGS

1. **WARNING:** To reduce the risk of electrical shock, use only extension cords approved for outdoor use. A 2-wire extension cord (an extension cord without a ground) may be used because the appliance is double insulated. Extension cords are available from your local retailer.
2. **EXTENSION CORD** - Make sure your cord is in good condition. When using an extension cord, be sure to use a cord that is heavy enough to carry the current that your appliance will draw. The table shows the correct size to use depending on the cord length and nameplate amperage rating. If in doubt, use the next size up.

MINIMUM WIRE SIZE OF EXTENSION CORDS FOR THIS APPLIANCE

Cord length (m)	Up to 50	50 - 75
Wire size (mm ²)	1.0	1.5

-Only use a weatherproof extension cord fitted with a coupler according to IEC 60320-2-3.

3. The nameplate on this appliance indicates what voltage it uses. Never connect the appliance to an AC voltage that differs from this voltage.
4. The appliance should be supplied via a residual current device (RCD) with a tripping current of not more than 30mA.
5. Do not use in the presence of flammable liquids (such as gasoline) or gases. Doing so may cause a fire or explosion and/or damage to the appliance.

PRE-OPERATIONAL SAFETY PRECAUTIONS

1. Thoroughly inspect your appliance for loose or damaged parts every time before using it. If there are any loose or damaged parts, perform the needed adjustment or repairs before starting your appliance.
2. Keep all bystanders, especially children, at least 9.2 m (30 ft.) away from the work area.
3. Inspect the area before starting the appliance. Remove all debris and hard or sharp objects such as rocks, glass, wire, etc.
4. **AVOID UNINTENTIONAL STARTING** - Be sure that the appliance switch is off when plugging in the appliance.
5. Always mount the nozzle before using the appliance.

OPERATIONAL SAFETY PRECAUTIONS

1. Always direct the cord to the rear away from the appliance.
2. Dress properly. Do not operate the appliance when barefoot or wearing open sandals. Always wear sturdy, rubber-soled footwear. The use of gloves, ear/hearing protection, and long trousers are recommended.
3. Wear goggles or safety glasses at all times when operating this appliance.
4. Do not wear loose-fitting clothing, or loose articles such as scarves, strings, chains, ties, etc. They could get drawn into the air intake. Also make sure long hair does not get drawn into the air intake.
5. Do not point the appliance in anyone's direction or in the direction of windows.
6. Walk, never run.



- As a vacuum, the appliance is designed to pick up dry material such as leaves, grass, small twigs and bits of paper. Do not attempt to vacuum wet debris as this may result in damage to the appliance and possible electric shock. To avoid severe damage to the impeller, do not vacuum metal, broken glass, etc.
- Disconnect the appliance from the main supply.
 - Whenever you leave the machine.
 - Before cleaning a blockage.
 - Before checking, cleaning or working on the appliance.
 - If the appliance starts to vibrate abnormally.
- Do not overreach or use the unit on unstable surfaces such as ladders, trees, steep slopes, rooftops, etc. Keep proper footing and balance at all times.
- Avoid situations that could set the dust bag alight. Do not operate near an open flame. Do not vacuum warm ash from fireplaces, barbecue pits, etc. Do not vacuum discarded cigars or cigarettes unless the cinders are completely cool.
- Do not put part of your body such as hands and fingers in the vacuum opening or exhaust opening, etc.

MAINTENANCE SAFETY WARNINGS

- Disconnect the appliance from the power supply when it is not in use and before servicing.
- Keep all nuts, bolts and screws tight to be sure the appliance is in safe working condition.
- Keep your appliance in good working condition. Only an AUTHORIZED SERVICE CENTER or other QUALIFIED SERVICE ORGANIZATION should perform maintenance procedures that are not described in this manual.
- Use only original replacement parts approved by RYOBI when servicing this appliance. The use of non-standard parts, or other accessories or attachments not designed for this appliance, could result in serious injury to the user and/or damage to the appliance.
- STORE THE APPLIANCE INDOORS** - When not in use, the appliance should be stored indoors in a dry and high place - out of the reach of children. Keep the appliance away from harmful substances such as solvents and fertilizers.

SIGNIFICANCE OF PICTOGRAMS (FIG. 22)

- Read the operator's manual.
- Wear eye protection.
- Do not use in the rain or leave outdoors while it is raining.
- SWITCH OFF** : Remove plug from mains before cleaning or maintenance.
- Do not clean inside the tube while plugging in.
- Keep bystanders away.

DESCRIPTION

- | | |
|-------------------------------------|---|
| 1. Switch | 14. Dust bag holder |
| 2. Screw | 15. Dust exhaust-opening |
| 3. Projection of nozzle | 16. Projection |
| 4. Nozzle | 17. Handle of dust bag |
| 5. Groove of housing | 18. Hook (A) |
| 6. Roller | 19. Hook (B) |
| 7. Wing bolt | 20. Hooked part |
| 8. Washer | 21. Metal fixture |
| 9. Aux. Handle (optional accessory) | 22. Shoulder strap (optional accessory) |
| 10. Groove of Aux. Handle | 23. Handle |
| 11. Knob | 24. Air vents |
| 12. Hex. Head bolt (M8X70) | 25. Mode change-over lever |
| 13. Dust bag | 26. Wide nozzle (optional accessory) |

SPECIFICATIONS

Input	2200 W
Air speed	200/235 km / h
Air volume	7.5/9.5 m ³ / min.
Mulching ratio	10: 1
Dust bag capacity	25 liter
Overall dimensions	905 X 174 X 400 mm
Net weight	3.5 kg

STANDARD ACCESSORIES

Dust bag, Roller set, Wing bolt, Washer.

APPLICATION

(Use only for the purposes listed below.)

- Cleaning of yards, garages, shop, porches, patios, etc.

SWITCH (Fig. 1)

This appliance is equipped with an on/off switch (1). To turn the unit on, slide the switch to forward (direction A). And to turn the unit off, slide the switch to backward (direction B).

Note:

To ensure safety (prevent accidents), safety switches are installed for the nozzle and dust bag. The appliance's switch cannot be turned on unless the nozzle and dust bag are correctly attached.

ATTACHING AND REMOVING THE NOZZLE (Fig. 2,3)

- Loosen the two screws (2) with a screwdriver (+). Do not remove the screws completely so that the nuts on the opposite sides won't get lost.
- Align the protruding part (3) of the nozzle with the groove (5) on the main body of the unit and insert the nozzle (4) into the main body of the unit.
- Tighten the two screws firmly.
- When removing the nozzle, loosen the two screws and pull out the nozzle.

WARNING!

Do not connect the power supply before attaching the nozzle.

ATTACHING AND ADJUSTING THE ROLLER (Fig. 4)

Attach the roller (6) to the tip of the nozzle using the wing bolt (7) and washer (8).

Move the roller forwards or backwards so that it is in an easy-to-use position and fix it in place with the wing bolt.

ATTACHING THE AUX. HANDLE AND ADJUSTING ITS ANGLE (Fig. 5) (Optional accessory)

- Position the aux. handle (9) so that the side with the narrow groove (10) faces the front, open it with both hands and set it onto the main body of the unit.
- Attach the aux. handle to the main body of the unit by lightly tightening the knob (11) and the hex. bolt (12).
- Position the aux. handle at an easy-to-use angle and fix it in position by securely tightening the knob.

ATTACHING AND REMOVING THE DUST BAG

(Fig. 6, 7, 8)

CAUTION!

Do not use the appliance in the vacuum mode without the dust bag (13) in place.

- Attach the dust bag holder (14) to the dust exhaust opening (15) of the motor housing. (Fig. 6)
Attach the dust bag holder so that the projection (16) of the motor housing will enter the front part of the dust bag holder. (Fig. 6)
- Pull up the handle (17) of dust bag, until the hook-A (18) catch the housing.
- Attach the hook-B (19) to the hooked part (20) of the lower part of the nozzle.
- When removing the dust bag, detach the hook-B from nozzle, press the hook-A and pull the handle of the dust bag holder off the motor housing. (Fig. 7)

SHOULDER STRAP (Fig. 9, 10) (Optional accessory)

- Attach the metal fixture (21) of the shoulder strap (22) to the hole of the upper part of the handle (23).
- The length of the shoulder strap is adjustable, so adjust it to a convenient length.

WIDE NOZZLE (Fig. 11) (Optional accessory)

By attaching the wide nozzle (26) to the end of the nozzle, debris can be cleared from a wide area.

The wide nozzle can be easily attached to the end of the nozzle.

EXTENSION CORD (Fig. 12)

MAKE SURE THE EXTENSION CORD SET IS IN GOOD CONDITION.

- Use an appropriate extension cord to connect to power. See "ELECTRICAL SAFETY WARNINGS" for recommended cords.
- Secure the extension cord to the motor housing as shown in fig. 12.

OPERATING

NEVER COVER AIR VENTS (24) SINCE THEY MUST ALWAYS BE OPEN FOR PROPER MOTOR COOLING. (Fig.13)

WARNING!

Do not use on a wet surface or in the rain.

Set the mode change-over lever (25) to the blower mode or vacuum mode. When the lever is in the REAR position, the appliance is in the vacuum mode (Fig. 14), and when the lever is in the FRONT position, the appliance is in the blower mode. (Fig. 15)

CAUTION! (Fig. 16)

Do not use the appliance when the lever is set in a halfway position. When using the appliance in the vacuum mode, turn the mode change-over lever all the way to the back side. When using the appliance in the blower mode, turn the mode change-over lever all the way to the front side.

OPERATING AS A BLOWER (Fig. 17,18,19)

Set the mode change-over lever to the FRONT position (blower mode).

Hold the appliance as shown in Fig. 17, 18 and 19 and sweep from side to side with the nozzle a few inches above the ground or floor. Move the appliance slowly, while accumulating a pile of debris.

1. Use the appliance as a blower for trees, shrubs, flower beds and hard to clean areas. (Fig. 17)
2. Use the appliance as a blower around buildings and for other normal cleaning. (Fig. 18)
3. Use the appliance as a blower for walls, overhangs and screens. (Fig. 19)

OPERATING AS A VACUUM (Fig. 20,21)

Set the mode change-over lever to the REAR position (vacuum mode).

Hold the appliance as shown in Fig. 20, tilting the nozzle slightly, and use a sweeping action to collect light debris. The debris will flow into the dust bag. Things such as leaves and small twigs will be mulched as they pass through the fan housing, allowing the dust bag to hold a lot of debris (Fig. 21).

When the dust bag gets full, suction will noticeably decrease. Turn off and unplug the appliance before you unzip the dust bag. Unzip the bag and empty the contents before continuing.

WARNING!

When the impeller in the motor housing is clogged with twigs, nylon bags, etc, turn off and unplug the appliance, remove the nozzle and then remove the obstruction.

MAINTENANCE

After use, check the appliance to make sure that it is in top condition. It is recommended that you take this appliance to a RYOBI Authorized Service Center for a thorough cleaning and lubrication at least once a year. **DO NOT MAKE ANY ADJUSTMENTS WHILE THE MOTOR IS IN MOTION.**

CLEANING THE APPLIANCE

1. Use a small brush to keep the air vents free of obstructions.
2. Do not use any strong detergents on the plastic housing or the handle. They can be damaged by certain household cleaners that contain aromatic oils such as pine and lemon, and by solvents such as kerosene. Moisture can also cause electric shocks. Wipe off any moisture with a soft cloth.

CLEANING THE DUST BAG

1. Empty the dust bag after each use to avoid deterioration and obstruction of the air flow which will reduce the performance of the appliance.
2. Clean the dust bag as needed. With eye protection on, turn the dust bag inside out after initial emptying and vigorously shake out the dust and debris.

WARNING!

To ensure safety and reliability, all repairs should be performed by an AUTHORIZED SERVICE CENTER or other QUALIFIED SERVICE ORGANIZATION.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RYOBI TECHNOLOGIES AUSTRALIA PTY. LTD.

GUARANTEE



Subject to the guarantee condition below, this Ryobi tool (hereinafter called "the product") is guaranteed by Ryobi (hereinafter called "the Company") to be free from defects in material or workmanship for a period of 24 months from the date of original purchase covering both parts and labour. Under the terms of this guarantee, the repair or replacement of any part shall be the opinion of the Company or its authorised agent. Should service become necessary during the warranty period, the owner should contact the Authorised Ryobi service agent, or the nearest Company Branch Office. In order to obtain guarantee service, the owner must present the sales docket and Guarantee Certificate to confirm date of purchase. This product is sold by the dealer or agent as principal and the dealer has no authority from the Company to give any additional guarantee on the Company's behalf except as herein contained or herein referred to.

Guarantee Conditions

This guarantee only applies provided that the Product has been used in accordance with the manufacturer's recommendations under normal use and reasonable care (in the opinion of the Company) and such

guarantee does not cover damage, malfunction or failure resulting from misuse, neglect, abuse, or used for a purpose for which it was not designed or is not suited and no repairs, alterations or modifications have been attempted by other than an Authorised Service Agent. This guarantee will not apply if the tool is damaged by accident or if repairs arise from normal wear and tear.

The Company accepts no additional liability pursuant to this guarantee for the costs of travelling or transportation of the Product or parts to and from the service dealer or agent - such costs are not included in this guarantee.

Certain legislation, including the Trade Practices Act, 1974 (as amended) and other state and territorial laws give rights to the buyer and impose liability on the seller in certain circumstances. Nothing herein shall have the effect of excluding, restricting or modifying any condition, guarantee, right or liability imposed, to the extent only that such exclusion, restriction or modification would render any term herein void.

RYOBI®

RYOBI TECHNOLOGIES AUSTRALIA PTY. LTD.

A.B.N. 98 002 277 509

SYDNEY: 359-361 Horsley Road, Milperra, N.S.W. 2214.

Contact during normal business hours.

Tel: (02) 9792 9888 - Fax: 1800 807 993 - www.ryobi.com.au

BRISBANE:

All enquiries Tel : 1300 361 505

HOBART:

All enquiries Tel : 1300 360 216

TOWNSVILLE:

All enquiries Tel : 1300 361 505

ADELAIDE:

All enquiries Tel : 1300 360 216

MELBOURNE:

960 Stud Road, Rowville, Vic. 3178

PERTH:

33-35 Sorbonne Cres., Canning Vale, W.A. 6155.

Tel : (03) 9764 8655

Tel : (08) 9455 7775

RYOBI NEW ZEALAND PTY. LTD.

AUCKLAND: 27 Clemow Drive, Mt Wellington, N.Z.

Tel: (09) 573 0230 - Free Call: 0800 279 624 - Fax: (09) 573 0231 - www.ryobi.co.nz

Contact during normal business hours.

This Guarantee Form Should Be Retained By The Customer At All Times

For your record and to assist in establishing date of purchase (necessary for in-guarantee service) please keep your purchase docket and this form completed with the following particulars.

Purchased From _____

Address Of Dealer _____

Date _____ Model No _____ Serial No _____

Present This Form With Your Purchase Docket When Guarantee Service Is Required.